




4-Slice
Toaster Oven

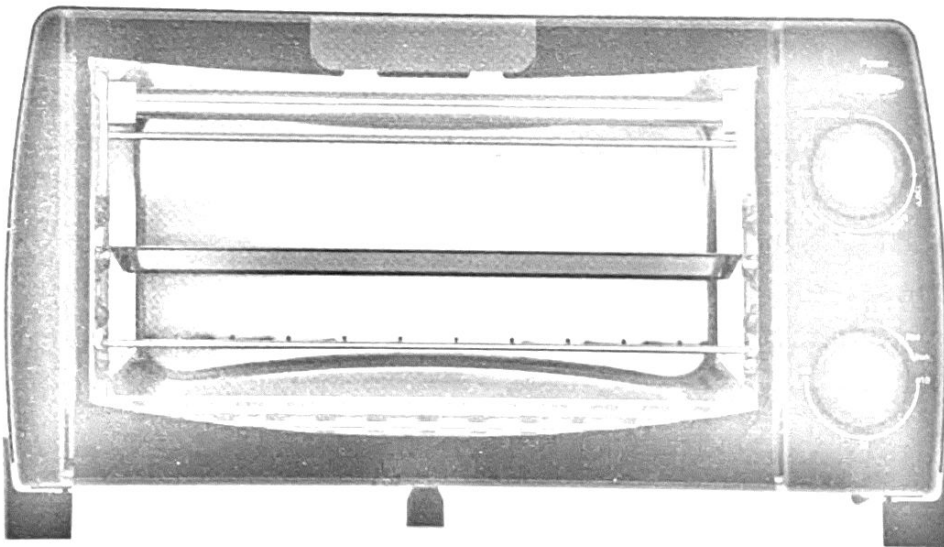

1010J-H15B

Customer Assistance:
1-866-321-9509

PN:0000048048078

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. READ ALL INSTRUCTIONS CAREFULLY.
2. Do not touch hot surfaces. Metal parts can become hot. Use any handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquids.
4. This appliance should not be used by young children. Close supervision is necessary when any appliance is operated near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let power cord hang over the edge of a table or countertop (where it can be accidentally pulled) or touch any hot surface.
10. Do not place appliance on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Use extreme caution when removing tray or disposing of hot grease.
12. To turn the oven OFF rotate the Temperature Control Knob counterclockwise to the OFF position and turn the Timer Knob to the OFF position. Then unplug from wall outlet.
13. Do not use this appliance for other than its intended use as outlined in this manual.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
15. Oversize foods or metal utensils must not be inserted into a toaster oven as they may create a fire or risk of electric shock.
16. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
17. Extreme caution should be exercised when using containers constructed of other than metal or glass.

18. Do not store any materials, other than the manufacturers recommended accessories, in this oven when not in use.
19. Do not place any of the following materials in the oven: paper, cardboard, plastic, or any other material that may catch fire or melt.
20. Do not cover crumb tray or any part of the oven with metal foil. This will cause over-heating of the oven.
21. Do not pull, twist or otherwise abuse cord.
22. Never operate any appliance on top of a non-heat-resistant or flammable surface.
23. Never leave appliance unattended when in use.
24. This appliance is not intended for commercial or industrial use.
25. HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

CORD PLUG

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to the nearest Wal-Mart Store.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used.


- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

Before you use this product for the first time, please take a few moments to read these instructions and keep them for reference. Pay particular attention to the Safety Instructions provided. Please review the product service and warranty statements.


OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

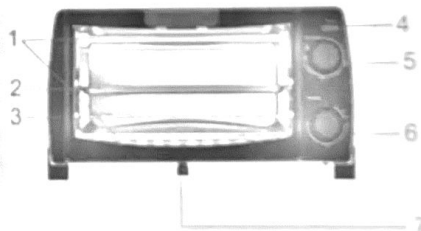

1. Heating element
2. Baking pan
3. Baking rack
4. Power light
5. Temperature dial
6. Timer control
7. Crumb tray

USING THE CONTROLS:

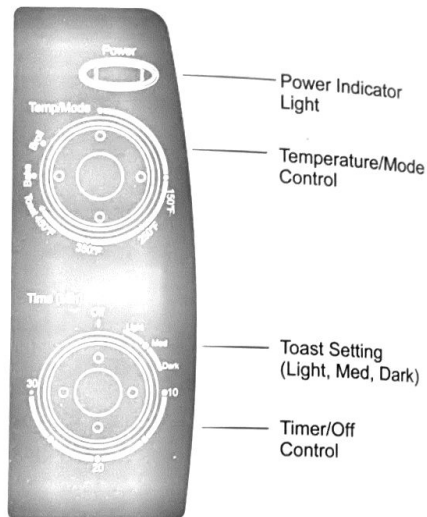

The oven has a Temperature/Mode control and a Power Indicator Light. Before attempting to operate the toaster oven, be sure to become familiar with the controls to ensure optimum performance.

Power Indicator Light: The light will be illuminated when the oven is operating. The light will illuminate as soon as the timer is set.

Timer: The timer can be set by rotating the knob clockwise. When the timer is set the unit will be ON and operating. When the timer completes a cycle it will sound an audible bell and turn the unit OFF.

Note: When setting the timer to less than 5 minutes always rotate the Timer Knob past 10 minutes and then rotate back to the desired time. This will ensure a more accurate time setting.


Temperature/Mode: The temperature of the oven cavity may be controlled up to 450 °F. Rotate the Temperature Knob clockwise to the desired setting. Both heating elements function when the unit is set from 150°F to 450°F setting.

On the Bake setting only the bottom element functions. The oven temperature is maintained at approximately 400°F-425°F.


On the Broil setting only the top element functions. The oven temperature is maintained at approximately 425°F-450°F.

Toast Mode: This oven has a Toast setting on the Temperature Knob. Both elements will function on the Toast setting. The heating elements will cycle On and Off.

See Toasting Instructions in the USING YOUR TOASTER OVEN section.

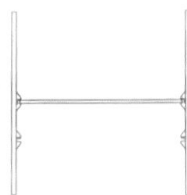

Upper Position

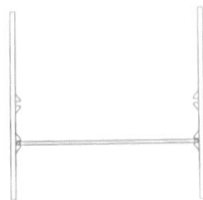

Lower Position

Baking rack positions:

This oven has two positions for the baking rack. The upper position should typically be used for broiling. The lower position is best suited for baking and toasting.

Exact positions are difficult to recommend due to personal preference. Experiment with different rack positions to suit individual taste.

Note: Unless toasting bread never place food directly on the baking rack. Always use baking pan.

USING YOUR TOASTER OVEN

Remove Preheat Label from oven door prior to use.

Before use remove any packing materials and wipe the body of your toaster oven with a damp cloth. Remove baking rack and baking pan. Wash baking rack and pan in hot, soapy water, and dry thoroughly.

Place oven on a flat counter or other stable surface. Position oven at least 3 inches away from wall or rear of counter. Make sure that nothing has been placed on top of the oven.

Note: Make sure the crumb tray is in the closed position before using. See **CARE AND CLEANING** instructions for proper crumb tray positioning. Note: Ensure that before plugging the toaster oven into the outlet, all controls are in the OFF position. Plug the cord into a 120 volt AC only AC outlet.

For the first time only, turn the Temperature Knob to 450°F and the Timer Knob to 15 minutes. This will burn off any residues or oils left on the heating elements.

NOTE: The oven may lightly smoke during the process. This is normal for a new oven and should not last more than 10-15 minutes.

DO NOT WRAP THE CORD AROUND THE MAIN BODY OF APPLIANCE DURING OR AFTER USE.

Toasting:

1. Place bread on the baking rack and close oven door.
2. Turn Temperature Knob to the Toast setting (just past 450°F).
3. Select toast shade preference by turning the Timer Knob clockwise to desired toast setting (LIGHT, MED or DARK).

Note: When setting the timer to less than 5 minutes always rotate the Timer Knob past 5 minutes (Med) and then rotate back to the desired time. This will ensure an accurate time setting.

The power light will be illuminated and both heating elements will operate while bread is toasting. When the timer has completed the cycle, a bell will sound and the unit will shut off. To stop the toasting cycle early, turn the Timer Knob counterclockwise to the OFF position.

Toasting Tips:

- Exact toasting settings are difficult to recommend due to personal preference. Experiment to suit individual taste.
- Results will vary depending on a particular type of bread's moisture, thickness and texture.
- Remember that thicker breads, toaster pastries and any foods containing fillings will require a longer toasting time.
- Remove bread promptly after toasting to avoid over-toasting by residual heat.
- Any pastry or foods containing fillings will be very hot. Always remove with caution.

Baking:

1. Set the Temperature Knob to the Bake setting.
2. Rotate Timer Knob clockwise to 5 minutes (Med) and allow oven to preheat.
3. While oven is preheating, place food on multipurpose pan. When timer bell sounds and oven has turned OFF, place the pan atop the baking rack inside the oven.

CAUTION: INSIDE OF OVEN WILL BE HOT. USE OVEN MITS OR HOT GLOVES TO PREVENT BURNING.

1. Close oven door. For baking times of 30 minutes or less rotate the Timer Knob clockwise to the desired time. The power light will be illuminated. Only the bottom element will function during the bake setting.
2. When timer bell sounds and unit is OFF, open door and remove food from oven.

NOTE: Always monitor food very carefully to avoid overcooking.

Broiling:

1. Place food to be broiled in the baking pan and set pan on top of baking rack inside the oven. **NEVER** place food directly on the baking rack.
 2. Close oven door.
 3. Rotate the Temperature Knob clockwise to the Broil setting.
 4. For items requiring a broiling time of 30 minutes or less rotate the Timer Knob clockwise to the desired time. The power light will be illuminated. Only the top element will function during broiling. After the broil cycle is completed the cycle, a bell will sound and the unit will shut off.
 5. For oven broiling, turn food over when it is almost fully cooked.
- NOTE: Always monitor food very carefully when broiling to avoid overcooking.

USEFUL TIPS:

1. Smoke may appear during broiling or baking. When broiling, it is always recommended to cut off excess fat on food before placing it in oven to minimize smoke. If oven smokes during baking, this usually means the baking pan is dirty and requires cleaning. See **CARE AND CLEANING** on page EN-11.
2. Some items may produce condensation on the oven door. This is normal and will quickly disappear.
3. Frozen foods and thick meat will take longer to cook.
4. To prevent food loss, avoid opening the door during cooking unless absolutely necessary.
5. After toasting, remember that frozen bread or multiple slices will require a longer toasting time.

6. Except when toasting, NEVER place items directly on baking rack.
Always use the multipurpose pan.
7. Remove all plastic and paper wrappings from food before cooking.
8. Always make sure there is adequate space between top of food being cooked and upper heating element.
9. When setting the timer to less than 5 minutes always rotate the Timer Knob past 5 minutes (Med) and then rotate back to the desired time. This will ensure an accurate time setting.

Use these oven temperatures and food suggestions as a guide. If using a packaged food, always follow the time and temperature recommendation on the package label. The exact cooking time and temperature will be effected by desired doneness, thickness of food, starting temperature, pan shape and material and other factors.

150°F to 250° F	Warm previously baked breads Keep pancakes, French toast, waffles warm Keep main dishes warm for serving up to 1 hour later
350°F	Cookies, refrigerated tubes or prepared dough Cook 9 to 13 minutes
375°F	Frozen toaster pastries Place on baking tray, cook 3 to 4 minutes Rolls, refrigerated tubes such as crescent or dinner rolls Cook 11 to 13 minutes
400°F	Biscuits, refrigerated tubes Bake 8 to 11 minutes Frozen dinner rolls Bake 7 to 9 minutes Pot Pie Slit top crust, place on baking tray Bake 30 to 35 minutes
450°F	Potatoes

Oven Baked Potatoes

Preheat oven to 450°F.

Scrub 1 to 4 potatoes and pierce to allow steam to escape. Rub potatoes lightly with vegetable oil or butter. Place on pan. Cook for 60-75 minutes or until potatoes are done.

To test for doneness, squeeze with an oven mitt. Potatoes should give easily.

Optional Toppings: Slit hot oven baked potatoes and top with your choice of these toppings, just before serving.

Butter	Sour cream
Minced chives or other fresh herbs	Chopped green onions
Chopped, hot steamed broccoli	Shredded Cheddar cheese
Prepared chili, heated	Crisp, crumbled bacon
Diced, fully-cooked ham	

Individual Pizzas Gone Wild

2	English Muffins, split and toasted
¼	cup sun dried tomato pesto spread or presto
¼	cup chopped, drained roasted red peppers
¼	cup marinated artichoke hearts, drained and chopped
¼	cup sliced wild mushrooms
1	tablespoon minced flat leaf parsley, basil or oregano
½	cup shredded pizza blend cheese

Preheat oven to 350°F.

Place toasted muffins, split side up, on baking pan. Spread pesto evenly over the top of each pizza. Top each with roasted red peppers, artichoke hearts, mushrooms and herbs. Sprinkle top with cheese. Cook 3 to 5 minutes or until hot and cheese is melted.

Makes 2 servings.

Garlic Cheese Bread

6	thick slices French or Italian bread, about 1-inch thick, toasted
¼	cup butter, softened
¼	cup shredded Parmesan cheese
¼	cup shredded Mozzarella cheese
¼	teaspoon garlic powder

Preheat oven to 450°F.

Arrange toasted bread in a single layer on baking pan.

Combine butter, cheese and garlic powder in a small mixing bowl. Stir to blend well. Spread butter - cheese mixture over top of each slice of bread.

Cook 2 to 4 minutes or until cheese mixture is hot and bubbly.

Makes 6 servings.

CARE AND CLEANING

This appliance requires little maintenance. It has no user serviceable parts. Do not try to repair it yourself. Refer to qualified personnel if servicing is needed.

TO CLEAN: Unplug unit and allow it to cool fully. After each use, when oven has cooled, clean food particles off with a damp sponge or cloth. **Never immerse toaster oven in water or any other liquid.**

Do not use abrasive cleaners, as they may damage unit.

For more thorough cleaning, wash rack and baking pan in hot, soapy water.


Before removing rack or baking pan, make sure unit is unplugged and has cooled thoroughly.

CRUMB TRAY:

1. Turn off and unplug the oven, allow it to completely cool before handling to empty the crumb tray as oven surfaces can be HOT after use.
2. Hold unit above the receptacle where the crumbs will be disposed.
3. Push black crumb tray knob toward the rear of the unit to disengage the crumb tray until it stops.
4. While still holding the crumb tray knob at the stopped position, pull the knob downward to open the hinged crumb tray. (Crumb tray is not removeable)
5. Empty crumbs
6. To close the crumb tray, hold the knob and rotate the crumb tray upward toward the body of the oven

7. Push the black crumb tray knob to the rear of the oven until it stops while still holding the crumb tray door toward the body of the oven
8. Allow the black crumb tray knob to spring toward the front of the oven to secure the crumb tray back into closed operating position

CAUTION: TO PREVENT COUNTERTOP FROM BEING DAMAGED, THE TOASTER OVEN MUST BE OPERATED WITH THE CRUMB TRAY IN PLACE, SECURELY CLOSED AND CLEANED OF EXCESS FOOD.

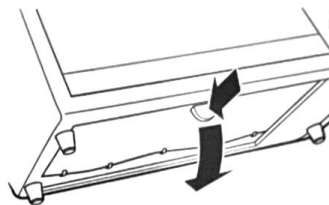

TO STORE: Unplug appliance and store in its box or in a clean, dry place.

ONE YEAR LIMITED WARRANTY

This product carries a warranty that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT: This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. Read directions carefully.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. Return the product to your nearest Wal-Mart store with the sales receipt. A replacement or refund may be offered at the discretion of Wal-Mart. If additional assistance is needed, please contact customer assistance at: 1-866-321-9509.

Wal-Mart expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

SAVE THIS FOR YOUR RECORDS

Mainstays® logo is a registered trademark of Wal-Mart Stores, Inc.
Bentonville, AR 72716
Made in China